



THE DISPLAY CHOICE
OF PROFESSIONALS™

www.agneovo.com

RX-2202 LCD Monitor
User Manual

TABLE OF CONTENTS

Safety Information

| | |
|------------------------------------------------------------------|---|
| Federal Communications Commission (FCC) Notice (U.S. Only) | 4 |
| WEEE | 5 |

Precautions

| | |
|----------------------------------|---|
| Notice | 6 |
| Cautions When Setting Up | 6 |
| Cautions When Using | 7 |
| Cleaning and Maintenance | 7 |
| Notice for the LCD Display | 8 |

Chapter 1: Product Description

| | |
|--------------------------------------------------|----|
| 1.1 Package Contents | 9 |
| 1.2 Wall Mounting Installation Preparation | 10 |
| 1.2.1 Wall Mounting | 10 |
| 1.2.2 Removing the Base Stand | 11 |
| 1.3 LCD Display Overview | 12 |
| 1.3.1 Front View and Keypad Buttons | 12 |
| 1.3.2 Rear View | 13 |

Chapter 2: Making Connections

| | |
|-------------------------------------------|----|
| 2.1 Connecting the Power | 14 |
| 2.2 Connecting Input Source Signals | 15 |
| 2.2.1 Connecting a Computer | 15 |
| Using VGA Cables | 15 |
| Using DVI Cables | 15 |
| Using HDMI Cables | 16 |
| Using DisplayPort Cables | 16 |
| Using RS232 Cables | 17 |
| Using Audio Cables | 17 |
| 2.2.2 Connecting a Video Device | 18 |
| Using Composite (CVBS) Cables | 18 |
| Using S-Video Cables | 19 |
| Using HDMI Cables | 19 |
| Using DisplayPort Cables | 20 |

Chapter 3: Using the LCD Display

| | |
|----------------------------------------------------|----|
| 3.1 Turning on the Power | 21 |
| 3.2 Selecting the Input Source Signal | 21 |
| 3.3 Adjusting the Volume | 22 |
| 3.3.1 Muting the Audio | 22 |
| 3.4 Choosing Your Preferred Picture Settings | 22 |
| 3.5 Using Picture-in-Picture (PIP) | 23 |
| 3.5.1 PIP/PBP Options | 23 |
| 3.5.2 PIP/PBP Swap | 24 |
| 3.6 Using FREEZE Function | 24 |

TABLE OF CONTENTS

| | |
|---------------------------------------------|----|
| 3.7 Using Auto Adjustment Function | 25 |
| 3.8 Using ROTATE Function | 25 |
| 3.9 Locking the OSD Menu | 26 |
| Chapter 4: On Screen Display Menu | |
| 4.1 Using the OSD Menu | 27 |
| 4.2 OSD Menu Tree | 29 |
| Chapter 5: Adjusting the LCD Display | |
| 5.1 Brightness | 32 |
| 5.2 Colour Temp. | 34 |
| 5.3 Image Setting | 35 |
| 5.4 Aspect Ratio | 38 |
| 5.5 PIP Setting | 39 |
| 5.6 Anti-Burn-in..... | 41 |
| 5.7 OSD Setting | 42 |
| 5.8 Audio Setting | 43 |
| 5.9 System 1 | 44 |
| 5.10 System 2 | 46 |
| 5.11 EcoSmart Sensor | 47 |
| 5.12 Input Select | 49 |
| Chapter 6: Appendix | |
| 6.1 Warning Messages..... | 50 |
| 6.2 Supported Resolutions | 51 |
| 6.3 Troubleshooting..... | 52 |
| 6.4 Transporting the LCD Display | 54 |
| Chapter 7: Specifications | |
| 7.1 Display Specifications | 55 |
| 7.2 Display Dimensions..... | 56 |
| 7.2.1 RX-2202 Dimensions | 56 |

SAFETY INFORMATION

Federal Communications Commission (FCC) Notice (U.S. Only)



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Use only an RF shielded cable that was supplied with the display when connecting this display to a computer device.

To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or excessive moisture.

THIS CLASS B DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS.




This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SAFETY INFORMATION

WEEE

Disposal of Waste Equipment by Users in Private Household in the European Union.

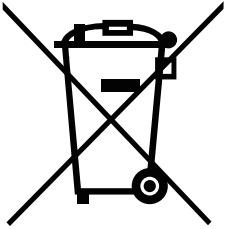

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

For Private Households in the European Union. To help conserve natural resources and ensure the product is recycled in a manner that protects human health and the environment, we would like to bring your attention to the following:

- The crossed-out dustbin on the device or outer packaging indicates the product is compliant with European WEEE (Waste Electrical and Electronic Equipment) Directive
- Always dispose of the old devices separately from household waste
- Batteries should be removed beforehand and disposed separately to the right collection system
- You are responsible with regard to the deletion of personal data on old devices before disposal
- Private households can hand in their old devices free of charge
- For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product



PRECAUTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



Symbols used in this manual

| | |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
|  | This icon indicates the existence of a potential hazard that could result in personal injury or damage to the product. |
|  | This icon indicates important operating and servicing information. |

Notice

- Read this User Manual carefully before using the LCD display and keep it for future reference.
- The product specifications and other information provided in this User Manual are for reference only. All information is subject to change without notice. Updated content can be downloaded from our web site at www.agneovo.com.
- To protect your rights as a consumer, do not remove any stickers from the LCD display. Doing so may affect the determination of the warranty period.

Cautions When Setting Up



Do not place the LCD display near heat sources, such as a heater, exhaust vent, or in direct sunlight.



Do not cover or block the ventilation holes in the housing.



Place the LCD display on a stable area. Do not place the LCD display where it may be subject to vibration or shock.



Place the LCD display in a well-ventilated area.



Do not place the LCD display outdoors.



Do not place the LCD display in a dusty or humid environment.



Do not spill liquid or insert sharp objects into the LCD display through the ventilation holes. Doing so may cause accidental fire, electric shock or damage the LCD display.

PRECAUTIONS

Cautions When Using



Use only the power cord supplied with the LCD display.



The power outlet should be installed near the LCD display and be easily accessible.



If an extension cord is used with the LCD display, ensure that the total current consumption plugged into the power outlet does not exceed the ampere rating.



Do not allow anything to rest on the power cord. Do not place the LCD display where the power cord may be stepped on.



If the LCD display will not be used for an indefinite period of time, unplug the power cord from the power outlet.



To disconnect the power cord, grasp and pull by the plug head. Do not tug on the cord; doing so may cause fire or electric shock.



Do not unplug or touch the power cord with wet hands.

Cleaning and Maintenance



The LCD display comes with NeoV™ Optical Glass. Use a soft cloth lightly moistened with a mild detergent solution to clean the glass surface and the housing.



Do not rub or tap the surface of the glass with sharp or abrasive items such as a pen or screwdriver. This may result in scratching the surface of the glass.



Do not attempt to service the LCD display yourself, refer to qualified service personnel. Opening or removing the covers may expose you to dangerous voltage or other risks.



Warning:



Unplug the power cord from the power outlet and refer to qualified service personnel under the following conditions:

- ◆ When the power cord is damaged.
- ◆ If the LCD display has been dropped or the housing has been damaged.
- ◆ If the LCD display emits smoke or a distinct odor.



Warning:



Ceiling mount or mount on any other horizontal surface overhead are not advisable.

Installation in contravention of the instructions may result in undesirable consequences, particularly hurting people and damaging property. Users who have already mounted the display on the ceiling or any other horizontal surface overhead are strongly advised to contact AG Neovo for consultations and solutions to help ensure a most pleasurable and fulfilling display experience.

PRECAUTIONS

Notice for the LCD Display

In order to maintain the stable luminous performance, it is recommended to use low brightness setting.

Due to the lifespan of the lamp, it is normal that the brightness quality of the LCD display may decrease with time.

When static images are displayed for long periods of time, the image may cause an imprint on the LCD display. This is called image retention or burn-in.

To prevent image retention, do any of the following:

- Set the LCD display to turn off after a few minutes of being idle.
- Use a screen saver that has moving graphics or a blank white image.
- Switch desktop backgrounds regularly.
- Adjust the LCD display to low brightness settings.
- Turn off the LCD display when the system is not in use.

Things to do when the LCD display shows image retention:

- Turn off the LCD display for extended periods of time. It can be several hours or several days.
 - Use a screen saver and run it for extended periods of time.
 - Use a black and white image and run it for extended periods of time.
-

When the LCD display is moved from one room to another or there is a sudden change from low to high ambient temperature, dew condensation may form on or inside the glass surface. When this happens, do not turn on the LCD display until the dew disappears.

Due to humid weather conditions, it is normal for mist to form inside the glass surface of the LCD display. The mist will disappear after a few days or as soon as the weather stabilizes.


There are millions of micro transistors inside the LCD display. It is normal for a few transistors to be damaged and to produce spots. This is acceptable and is not considered a failure.

CHAPTER 1: PRODUCT DESCRIPTION


1.1 Package Contents

When unpacking, check if the following items are included in the package. If any of them is missing or damaged, contact your dealer.


LCD Display

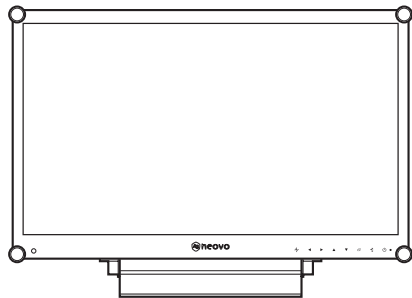


Quick Start Guide

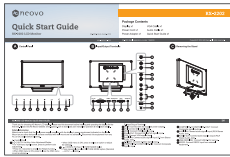


Power adapter

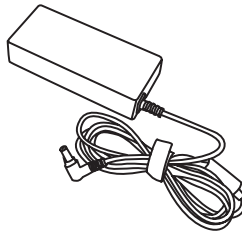


Power cord

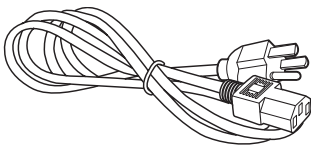


VGA cable



Audio cable

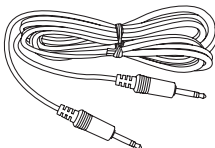

Warranty card

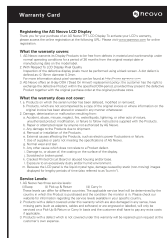

Note:

Must use only the supplied power adapter:

- ◆ DELTA ELECTRONICS, INC.
Model no.: ADP-40DD B
Rating: 12V/3.33A

Note:

- ◆ The pictures are for reference only. Actual items may vary upon shipment.

PRODUCT DESCRIPTION

1.2 Wall Mounting Installation Preparation


1.2.1 Wall Mounting

1 Remove the base stand.

See procedures below.

2 Wall mount the LCD display.

Screw the mounting bracket to the VESA holes at the rear of the LCD display.

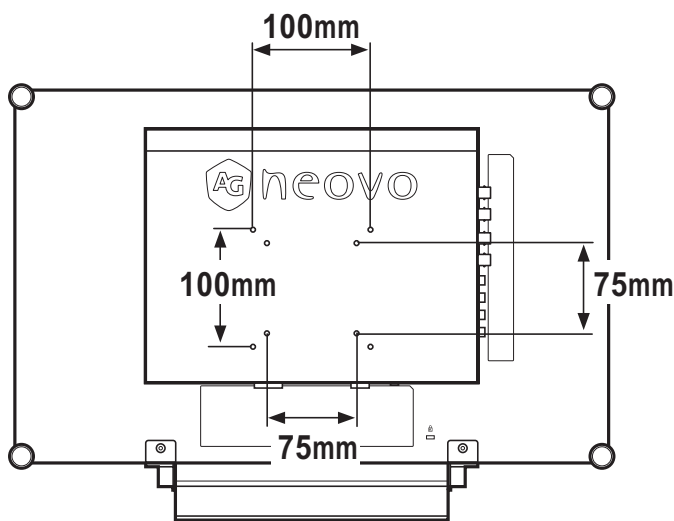

Note:

To protect the glass panel, place a towel or soft cloth before laying the LCD display down.



Warning:



Ceiling mount or mount on any other horizontal surface overhead are not advisable.

Installation in contravention of the instructions may result in undesirable consequences, particularly hurting people and damaging property. Users who have already mounted the display on the ceiling or any other horizontal surface overhead are strongly advised to contact AG Neovo for consultations and solutions to help ensure a most pleasurable and fulfilling display experience.

Note:


Take measures to prevent the LCD display from falling down and lessen possible injury and damage to the display in case of earthquakes or other disasters.

- ◆ Use only the 75 x 75 mm and 100 x 100 mm wall mount kit recommended by AG Neovo.
- ◆ Secure the LCD display on a solid wall strong enough to bear its weight.

PRODUCT DESCRIPTION

1.2.2 Removing the Base Stand

- 1 Lay the LCD display face down on a flat even surface.
- 2 Remove the screws* securing the base stand from the LCD display.
- 3 Detach the base stand.

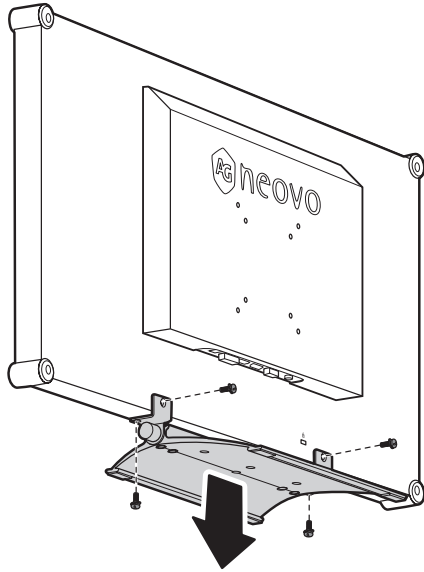


Note:

(*) The screw size is M4 x 10mm.

PRODUCT DESCRIPTION

1.3 LCD Display Overview

1.3.1 Front View and Keypad Buttons

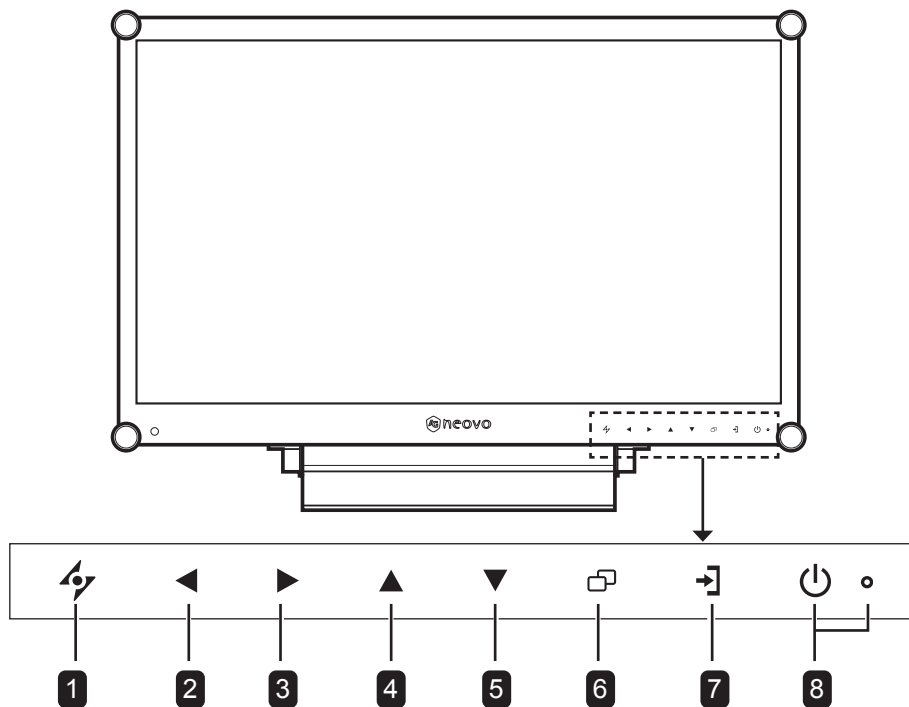

1 AUTO

Hot Key: Auto Adjustment/Rotate

- For VGA input signal source, press to perform auto adjustment.
- Press for 3 seconds to enable the Rotate function.
- When OSD menu is ON, press to close the OSD menu or exit a submenu.

2 LEFT

Hot Key: Audio Volume Adjustment

- Press to display the volume bar. Then press the LEFT key to decrease the volume.
- When OSD menu is ON, press to select an option or adjust the settings.

3 RIGHT

Hot Key: Screen Freeze

- Press to activate the screen freeze function. To deactivate, press any key except for the Power key.
- When the volume bar appears, press to increase the volume.
- When OSD menu is ON, press to select and option, adjust the settings, or enter the submenu.

4 UP

Hot Key: PIP/PBP Select

- Press repeatedly to select PIP/PBP option (PIP → PBP → OFF).
- When OSD menu is ON, press to select an option or adjust the settings.

5 DOWN

Hot Key: PICTURE MODE Select

- Press repeatedly to select PICTURE MODE option (Standard → CCTV → VIDEO).
- When OSD menu is ON, press to select an option or adjust the settings.
- When PIP is ON, press to swap the PIP main and sub picture.

6 MENU

Press to display/hide the OSD menu.

7 SOURCE


Press to select the input signal source.

8 POWER and LED Indicator

- Press to turn the power on or off.
- Indicate the operating status of the LCD display:
 - Lights Green when the LCD display is turned on.
 - Lights Amber when the LCD display is in standby mode.
 - Lights Off when the LCD display is turned off.

PRODUCT DESCRIPTION

1.3.2 Rear View

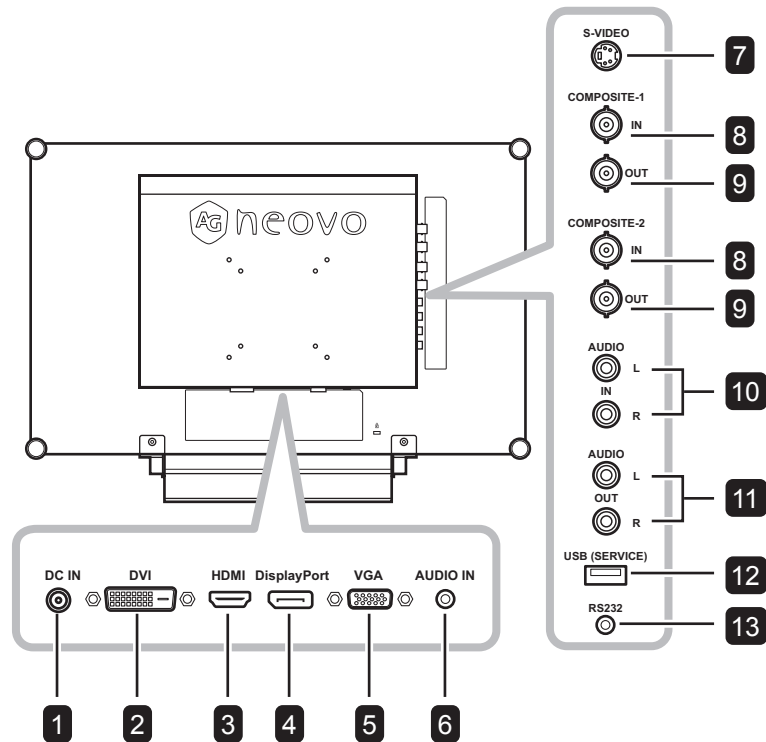


- 1 DC IN**
Connect with the supplied power adaptor.
- 2 DVI**
Connect DVI signals input.
- 3 HDMI**
Connect HDMI signals input.
- 4 DisplayPort**
Connect DisplayPort signals input.
- 5 VGA**
Connect VGA signals input.
- 6 AUDIO IN**
Connect audio signals input (3.5 mm Stereo Audio Jack).
- 7 S-VIDEO**
Connect S-Video signals input.
- 8 COMPOSITE-1/COMPOSITE-2 IN**
Connect Composite (CVBS) signals input.
- 9 COMPOSITE-1/COMPOSITE-2 OUT**
Connect Composite (CVBS) signals output.
- 10 AUDIO IN**
Connect audio signals input (RCA Stereo Audio Jack).
- 11 AUDIO OUT**
Connect audio signals output (RCA Stereo Audio Jack).
- 12 USB (SERVICE)**
Connect USB 2.0 for service.
- 13 RS232**
Connect RS232 input from external equipment.

CHAPTER 2: MAKING CONNECTIONS

2.1 Connecting the Power

- 1 Connect the power cord to the power adapter.
- 2 Connect the power adapter to the DC power input at the rear of the LCD display.
- 3 Connect the power cord plug to a power outlet or a power supply.

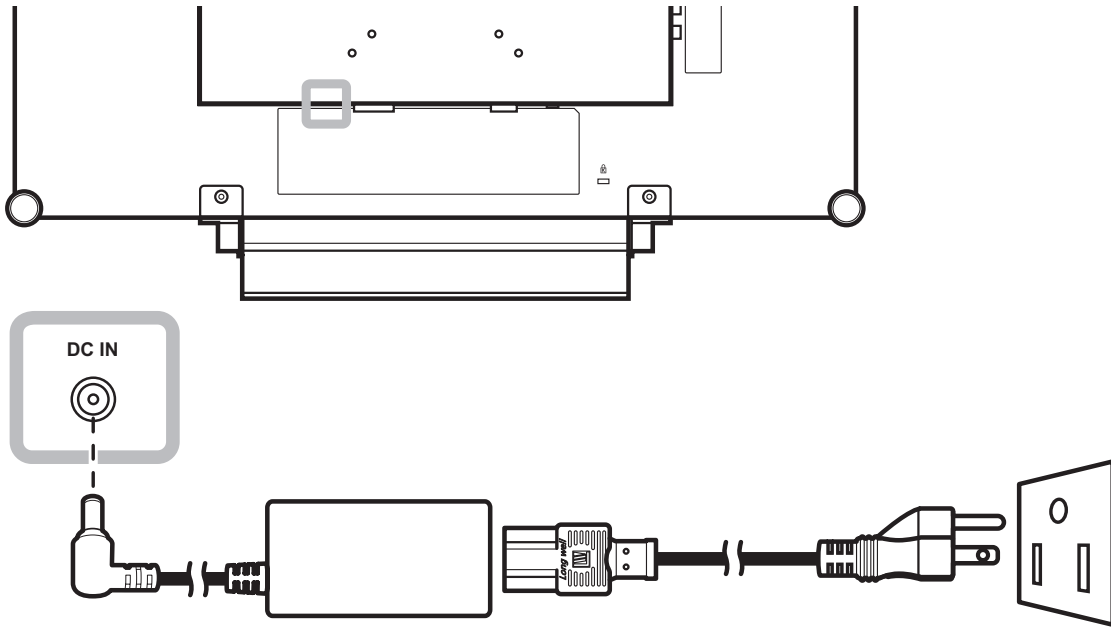

Caution:

- ◆ Make sure that the LCD display is not connected to the power outlet before making any connections. Connecting cables while the power is ON may cause electric shock or personal injury.



Caution:

- ◆ When unplugging the power cord, hold the power cord by the plug head. Never pull by the cord.


MAKING CONNECTIONS

2.2 Connecting Input Source Signals

2.2.1 Connecting a Computer


Using VGA Cables

Connect one end of a VGA cable to the VGA connector of the LCD display and the other end to the VGA connector of the computer.

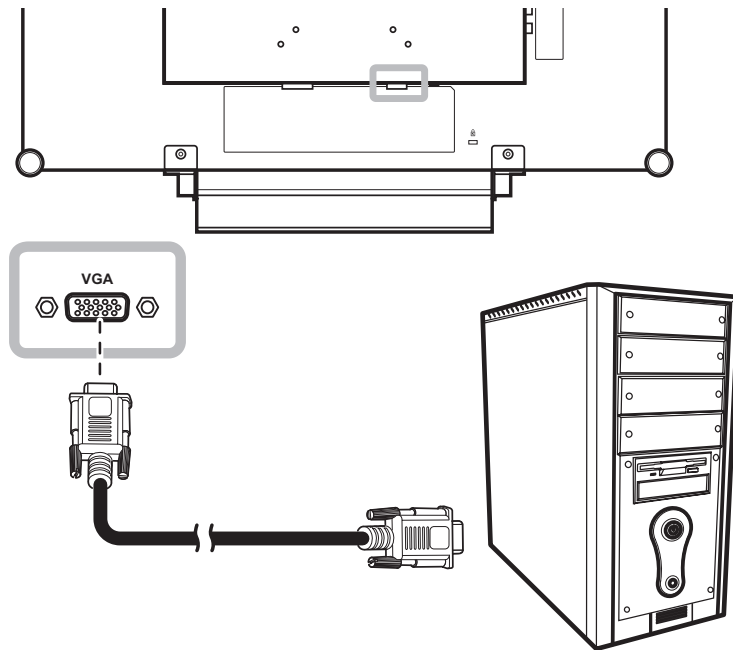

Using DVI Cables


Connect one end of a DVI (DVI-D) cable to the DVI connector of the LCD display and the other end to the DVI connector of the computer.

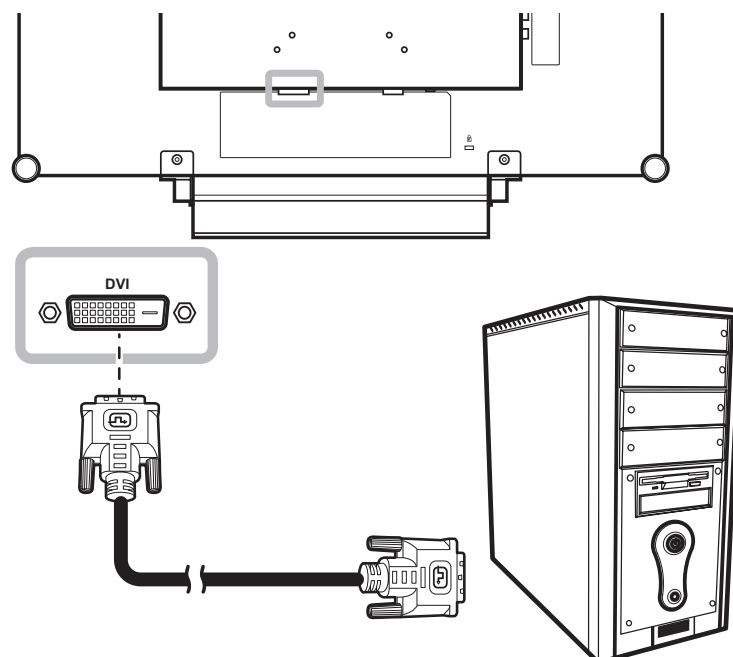

MAKING CONNECTIONS


Using HDMI Cables

Connect one end of an HDMI cable to the HDMI connector of the LCD display and the other end to the HDMI connector of the computer.

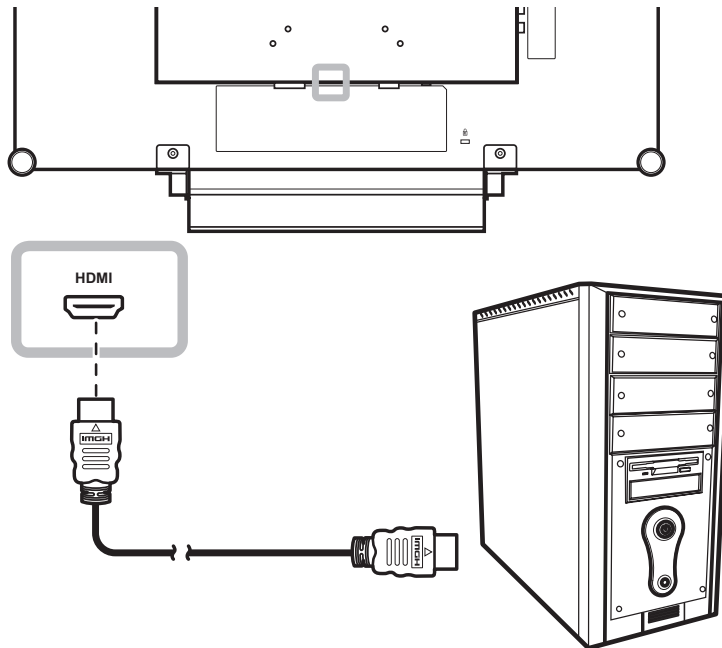

Using DisplayPort Cables


Connect one end of a DisplayPort cable to the DisplayPort connector of the LCD display and the other end to the DisplayPort connector of the computer.

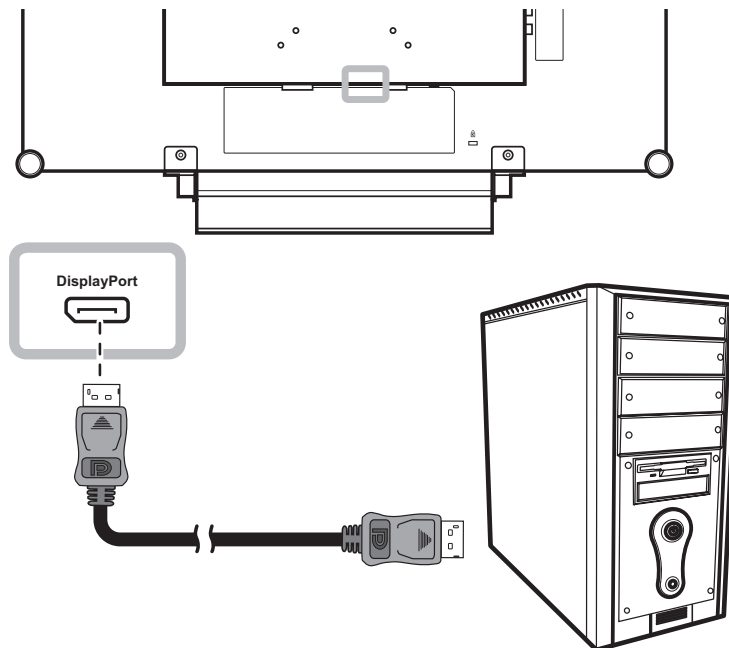

MAKING CONNECTIONS


Using RS232 Cables

Connect one end of an RS232 cable to the RS232 connector of the LCD display and the other end to the RS232 connector of the computer.

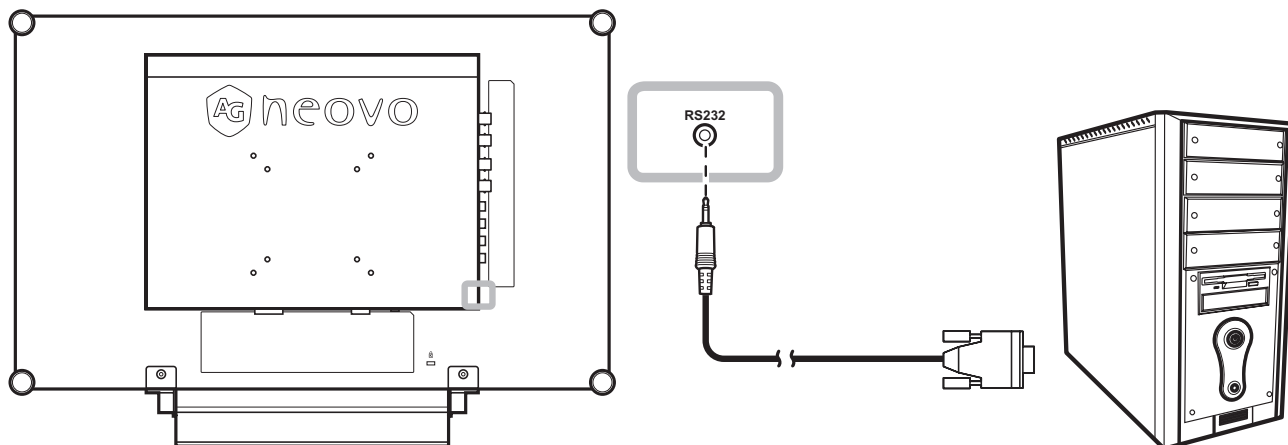

Using Audio Cables

Connect one end of an audio cable to the AUDIO IN connector at the rear of the LCD display and the other end to the audio out connector of the computer.

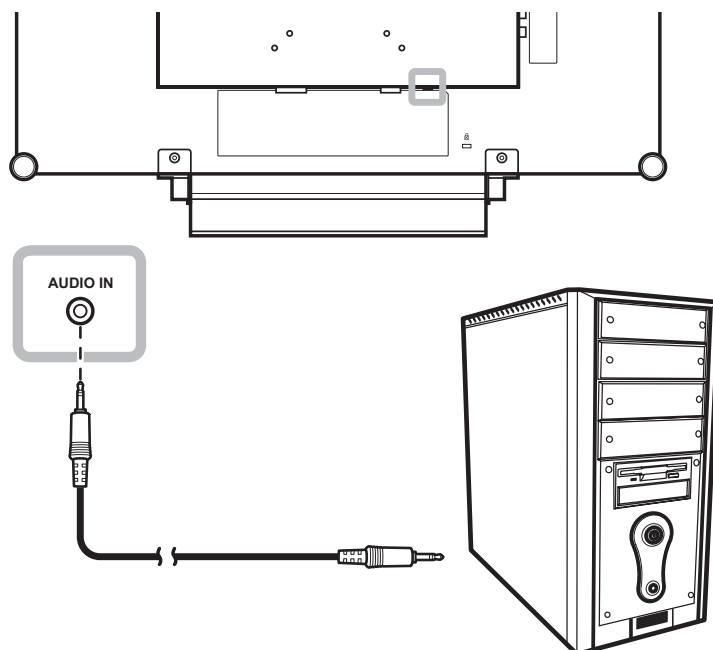

MAKING CONNECTIONS


2.2.2 Connecting a Video Device

Using Composite (CVBS) Cables

Connect one end of a Composite (CVBS) cable to the COMPOSITE 1 / COMPOSITE 2 IN connector of the LCD display and the other end to the Composite (CVBS) connectors of your device.

For audio input, connect an RCA cable to the AUDIO IN connectors of the LCD display and the audio out connector of your device.

For video looping, connect one end of a Composite (CVBS) cable to the COMPOSITE 1 / COMPOSITE 2 OUT connector of the LCD display and the other end to the COMPOSITE 1 / COMPOSITE 2 IN connector of the additional display.

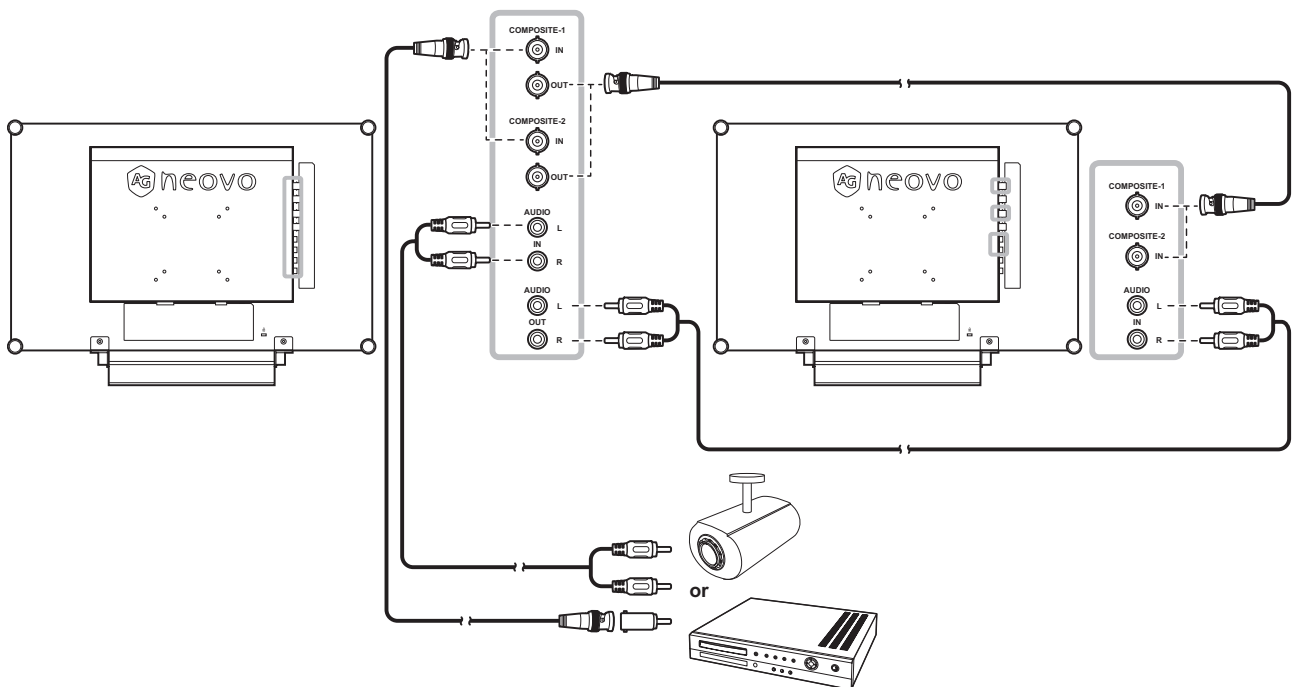


MAKING CONNECTIONS

Using S-Video Cables


Connect one end of an S-Video cable to the S-VIDEO connector of the LCD display and the other end to the S-VIDEO connector of your device.

For audio input, connect an RCA cable to the AUDIO IN connectors of the LCD display and the audio out connector of your device.

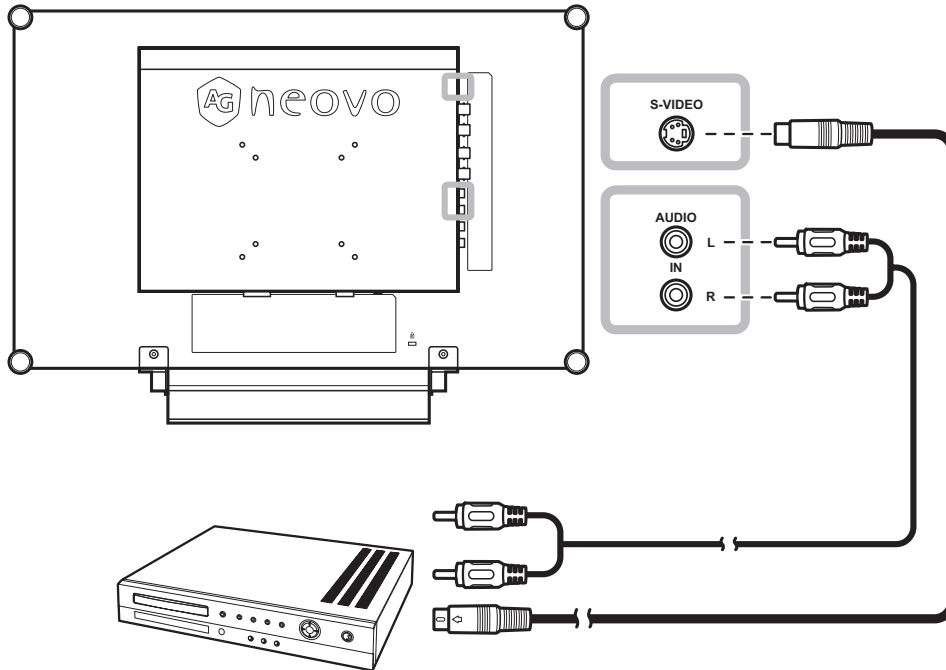

Using HDMI Cables


Connect one end of an HDMI cable to the HDMI connector of the LCD display and the other end to the HDMI connector of your device.

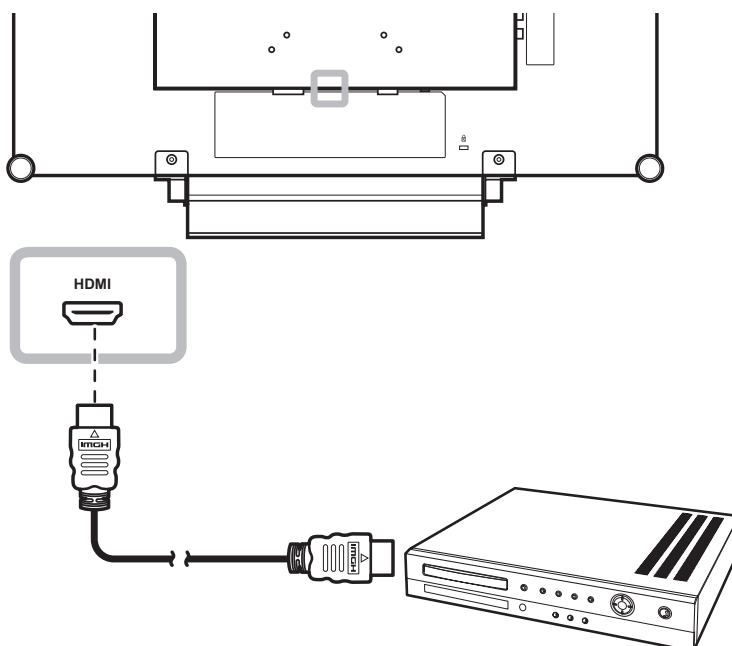

MAKING CONNECTIONS


Using DisplayPort Cables

Connect one end of a DisplayPort cable to the DisplayPort connector of the LCD display and the other end to the DisplayPort connector of your device.

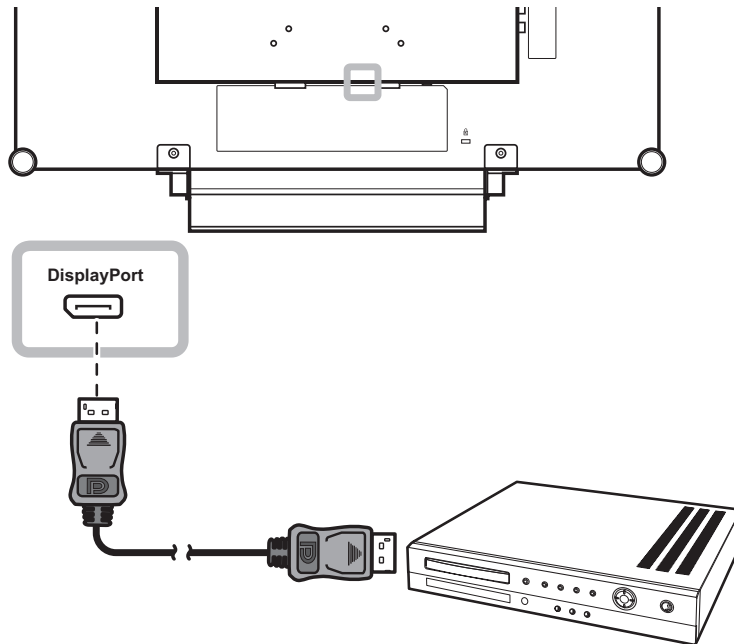

CHAPTER 3: USING THE LCD DISPLAY

3.1 Turning on the Power

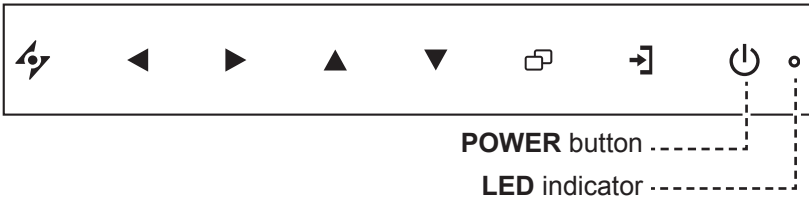

- 1 Connect the power cord to the power adapter. Then connect the power adapter to the DC power input at the rear of the LCD display.
- 2 Press the **POWER** button to turn the LCD display on. The LED indicator turns GREEN. When the LCD display is turned on, press the POWER button to turn off the LCD display. The LED indicator turns off.

3.2 Selecting the Input Source Signal



- 1 Press the **→** button to call out the input source menu.



- 2 Press the **▲** or **▼** button to highlight an input source.
- 3 Press the **▶** button to select the input source.

Note:

- ◆ The LCD display still consumes power as long as the power cord is connected to the power outlet. Disconnect the power cord to completely cut off power.

Notes:

- ◆ After selecting an input source signal, the input source signal message appears on the screen briefly.

For example, HDMI is selected the following message is displayed.



- ◆ If the selected input source signal is not connected to the LCD display or is turned off, the no signal message is displayed on the screen.



- ◆ If the resolution or the graphics card of the connected computer is set too high, the input out of range message is displayed.




USING THE LCD DISPLAY

3.3 Adjusting the Volume



Hot Key: **Audio Volume Adjustment**

- 1 Press the ◀ button to call out the volume bar.



- 2 Press the ▶ button to increase volume or the ◀ button to decrease volume.

3.3.1 Muting the Audio

Press the ▶ and ◀ buttons simultaneously to mute or unmute the audio.

3.4 Choosing Your Preferred Picture Settings



Hot Key: **PICTURE MODE Select**

Press the ▼ button repeatedly to toggle between the picture modes.

Options are as follows:

- STANDARD MODE: Default settings that suits most environments and types of video.
- CCTV MODE: Settings adjusted for monitoring CCTV.
- VIDEO MODE: Settings adjusted for video.



USING THE LCD DISPLAY

3.5 Using Picture-in-Picture (PIP)

The Picture-in-Picture (PIP) and Picture-by-Picture (PIP) feature allows viewing of more than one input source signal on the LCD display.

3.5.1 PIP/PBP Options



----- Hot Key: **PIP/PBP Select**

Press the ▲ button repeatedly to enable and scroll among the PIP/PBP options. Options are as follows:

- PIP On: The sub source signal is displayed within the main source signal.
- PBP (Picture-by-Picture): The main source and the sub source signals are displayed side by side with equal display size.
- PIP Off: PIP function is disabled, only the main source signal is displayed.

PIP On



PBP



PIP Off



Note:

- ◆ The main source and sub source signals can be set in PIP Setting, see page 39.
- ◆ Some input source signal combinations do not support PIP. See PIP Compatibility table on page 40.

USING THE LCD DISPLAY

3.5.2 PIP/PBP Swap

The main and the sub source signals set in PIP/PBP Setting can be easily swapped using the keypad.



Press the ▼ button to swap the main source and the sub source signals. See illustration below.



3.6 Using FREEZE Function



Hot Key: **Screen Freeze**

The FREEZE function allows you to freeze the screen image but still continues real-time playback until the image is unfreeze.

Press the ► button to activate screen freeze, the screen freeze message is displayed on the screen.



You can press any button to deactivate except the **POWER** button.

Note:

- ◆ PIP/PBP Swap can only be executed if PIP is enabled, see page 39.

USING THE LCD DISPLAY

3.7 Using Auto Adjustment Function



Hot Key: **Auto Adjustment/Rotate**

Auto Adjustment function automatically tunes the LCD display to its optimal setting, including horizontal position, vertical position, clock, and phase.

Press the lightning bolt button to perform auto adjustment.

The message auto adjusting is displayed on the screen.



During auto adjustment, the screen will slightly shake for a few seconds.

When the message disappears, auto adjustment is completed.

3.8 Using ROTATE Function

The ROTATE function allows you to rotate the screen image at 180°.

Press the lightning bolt button for 3 seconds to rotate the picture 180°.



After ROTATE image

After executing ROTATE, press the lightning bolt button for 3 seconds again to rotate the picture back to its normal state.



Original screen image

Note:

- ◆ Auto Adjustment function is available only during VGA input signals.
- ◆ It is recommended to use the auto adjustment function when using the LCD display for the first time or after a resolution or frequency change.
- ◆ It is recommended to perform the Auto Adjustment function only when the image (non-black) is displayed in full screen.

Note:

- ◆ ROTATE function can only be executed if PIP is off, see page 39.

USING THE LCD DISPLAY

3.9 Locking the OSD Menu

Lock the OSD menu to protect the LCD display from unauthorised users or from accidentally pressing the keypad.

To lock the OSD, press and hold the keypad buttons listed below for at least 5 seconds or until the






message appears.

When the OSD is locked, all keypad buttons are inactivated.


| Type of OSD Lock | Lock Operation | Unlock Operation |
|--------------------------------------------------|----------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lock all buttons | Press and hold the ►, ▲, and ▼ buttons simultaneously for 5 seconds. | Do one of the following to unlock: <ul style="list-style-type: none">• Press and hold the ►, ▲, and ▼ buttons simultaneously for 5 seconds or until the OSD menu appears.• Press and hold the ◀, ▲, and ▼ buttons simultaneously for 5 seconds or until the OSD menu appears. |
| Lock all buttons except the POWER button. | Press and hold the ◀, ▲, and ▼ buttons simultaneously for 5 seconds. | |

CHAPTER 4: ON SCREEN DISPLAY MENU

4.1 Using the OSD Menu
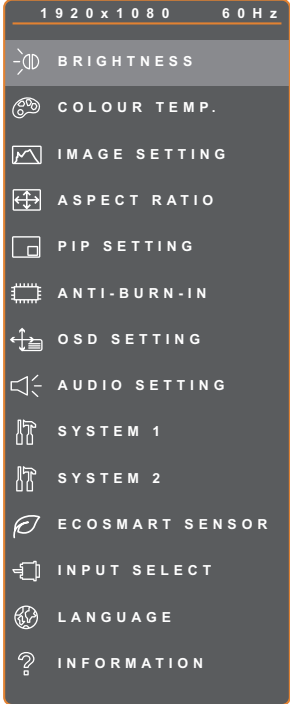
| | | Operation |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| 1 | <p>Display the main menu screen.</p>  <p>Navigation Window</p> | <p>Press the  button.</p> |
| 2 | <p>Select the menu.</p>  | <ol style="list-style-type: none">1 Press the ▲ or ▼ button.2 Press the ► button to enter the submenu. |

ON SCREEN DISPLAY MENU
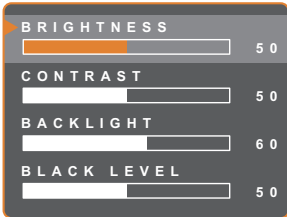
| | | Operation |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|-----------|
| <p>3 Select the submenu item.</p>  <p>The highlighted item with an orange arrow indicates the active submenu.</p> | <p>Press the ▲ or ▼ button.</p> | |
| <p>4 Adjust the settings.</p> | <p>Press the ◀ or ▶ button.</p> | |
| <p>5 Exit the submenu.</p> | <p>Press the ⚡ or ◻ button to return to the previous menu.</p> | |
| <p>6 Close the OSD window.</p> | <p>Press the ⚡ or ◻ button again.</p> | |


When settings are modified, all changes are saved when the user does the following:

- Proceeds to the another menu.
- Exits the OSD menu.
- Waits for the OSD menu to disappear.

Note: Availability of some menu items depend on the input source signal. If the menu is not available, it is disabled and grayed out.

ON SCREEN DISPLAY MENU

4.2 OSD Menu Tree

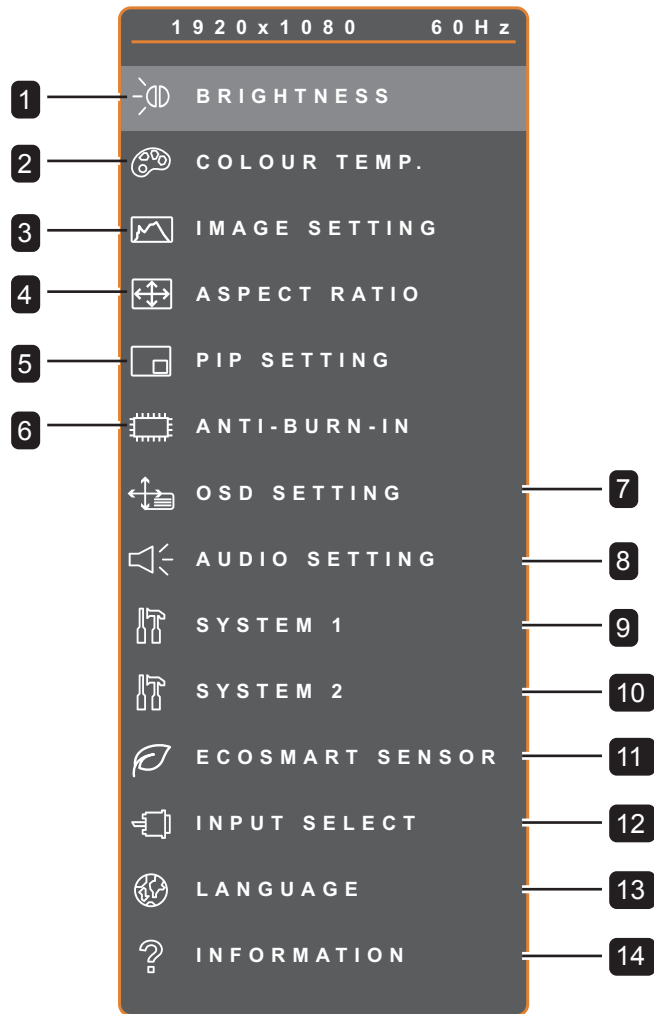

| Main Menu | Submenu | Remarks |
|-----------------|------------------------------------------------------------------------------------------------------------------------------------|--------------|
| 1. BRIGHTNESS | <ul style="list-style-type: none"> • BRIGHTNESS • CONTRAST • BACKLIGHT • BLACK LEVEL | See page 32. |
| 2. COLOUR TEMP. | <ul style="list-style-type: none"> • NEUTRAL • WARM • COOL • USER • AUTO COLOUR | See page 34. |

ON SCREEN DISPLAY MENU


| Main Menu | Submenu | Remarks |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| 3. IMAGE SETTING | <ul style="list-style-type: none"> • SHARPNESS • SATURATION • TINT • GAMMA • COLOUR RANGE • NOISE REDUCTION • PICTURE MODE • H. POSITION • V. POSITION • PHASE • CLOCK | See page 35. |
| 4. ASPECT RATIO | <ul style="list-style-type: none"> • FULL • REAL • NATIVE • ZOOM • OVERSCAN | See page 38. |
| 5. PIP SETTING | <ul style="list-style-type: none"> • PIP • MAIN SOURCE • SUB SOURCE • SUB PICTURE SIZE • SUB PIC. POS. • SWAP | See page 39. |
| 6. ANTI-BURN-IN | <ul style="list-style-type: none"> • ENABLE • INTERVAL (HOURS) • MODE | See page 41. |
| 7. OSD SETTING | <ul style="list-style-type: none"> • TRANSPARENCY • OSD H. POSITION • OSD V. POSITION • OSD TIMER | See page 42. |
| 8. AUDIO SETTING | <ul style="list-style-type: none"> • VOLUME • AUDIO • SOURCE | See page 43. |
| 9. SYSTEM 1 | <ul style="list-style-type: none"> • STANDBY • SOURCE DETECT • DDC/CI • BLUE SCREEN • SIGNAL INFO • Alink • LOGO • LED • RESET | See page 44. |





ON SCREEN DISPLAY MENU



| Main Menu | Submenu | Remarks |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| 10. SYSTEM 2 | <ul style="list-style-type: none"> • SUPER RESOLUTION • OVERDRIVE • DCR • NIGHT MODE • MONITOR ID | See page 46. |
| 11. ECOSMART SENSOR | <ul style="list-style-type: none"> • ENABLE • MODE • LEVEL | See page 47. |
| 12. INPUT SELECT | <ul style="list-style-type: none"> • VGA • DVI • HDMI • DISPLAYPORT • COMPOSITE 1 • COMPOSITE 2 • S-VIDEO | See page 48. |
| 13. LANGUAGE | Select the OSD language: EN / FR / DE / ES / IT / PY / RO / PL / CS / NL / 简中 / 繁中 | |
| 14. INFORMATION | Displays settings information such as Input, Resolution, Horizontal Frequency, Vertical Frequency, Timing Mode, and Firmware Version. | |

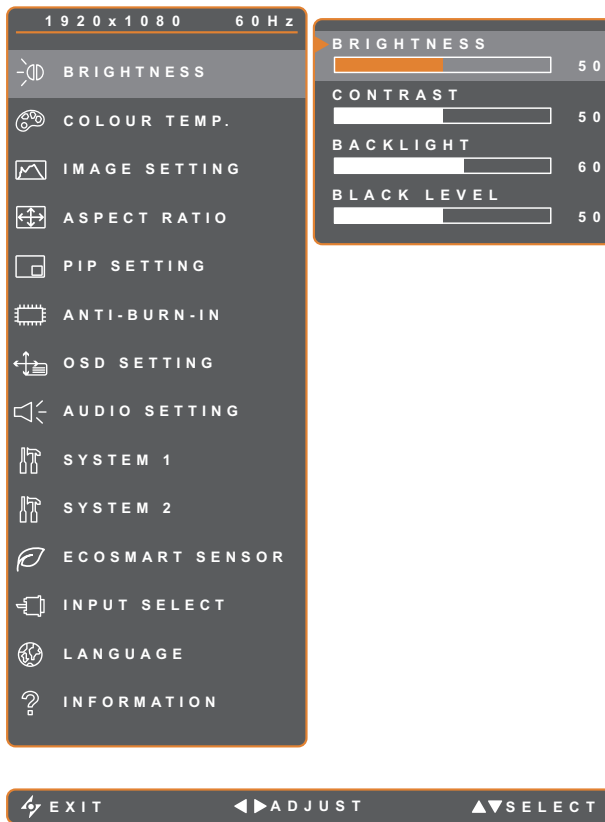CHAPTER 5: ADJUSTING THE LCD DISPLAY

5.1 Brightness



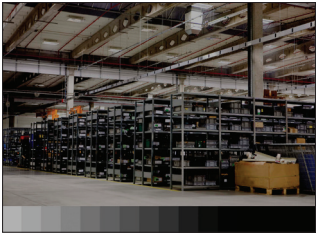
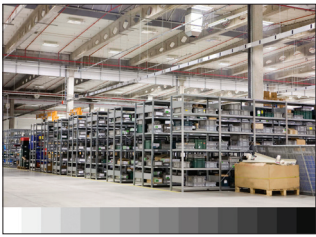

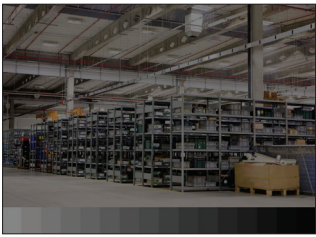





1. Press the  button to call out the OSD window.
2. Select **BRIGHTNESS** menu, then press the  button.
3. Press the  or  button to select an option.

| Item | Function | Operation | Range |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|
| BRIGHTNESS | Adjusts the luminance of the screen image. | Press the  or  button to adjust the value. | 0 to 100 |
| CONTRAST | Adjusts the difference between the black level and the white level. | | |
| BACKLIGHT | Adjusts the luminance of the screen image. Note: This menu option is not available if the ECOSMART SENSOR function is enabled. | | |
| BLACK LEVEL | Adjusts the black level of the screen image. Low brightness setting makes black colour darker. | | |

See comparison illustrations on page 33.

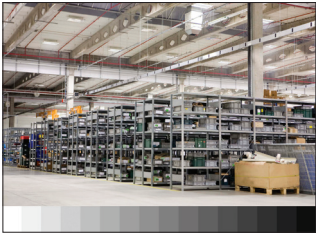ADJUSTING THE LCD DISPLAY

| | Original Setting | High Setting | Low Setting |
|-------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| BRIGHTNESS |  |  |  |
| CONTRAST |  |  |  |
| BLACK LEVEL |  |  |  |

ADJUSTING THE LCD DISPLAY

5.2 Colour Temp.




1. Press the button to call out the OSD window.
2. Select **COLOUR TEMP.** menu, then press the button.
3. Press the or button to select an option.









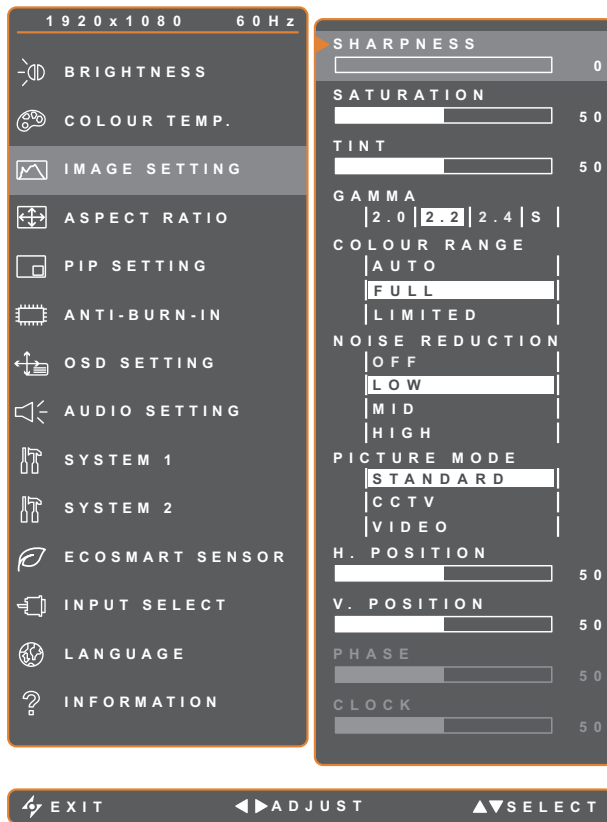



| Item | Function | Operation | Range |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|------------------------------------------------|
| COLOUR TEMP. | Provides several colour settings. | Press the or button to select the setting. | NEUTRAL WARM COOL USER AUTO COLOUR |
| | Colour setting can be set to: <ul style="list-style-type: none"> • NEUTRAL - commonly used for normal lighting conditions. • WARM - Applies a reddish tint for warmer colours. • COOL - Applies a bluish tint for cooler colours. • USER - This allows users to set the colour temperature by adjusting the R, G, B settings according to one's preference. <ol style="list-style-type: none"> 1 Select USER, and press the button. 2 Press the or button to select the colour you want to adjust. 3 Press the or button to adjust the values between 0 ~ 255. • AUTO COLOUR - Operates the white balance and automatically adjusts the colour settings. <ol style="list-style-type: none"> 1 Select AUTO COLOUR. 2 Press the button to activate auto colour. <p>Note: This menu option is only available if the input source is VGA.</p> <p>Note: Activate RESET to return the colour to its default setting.</p> | | |

ADJUSTING THE LCD DISPLAY


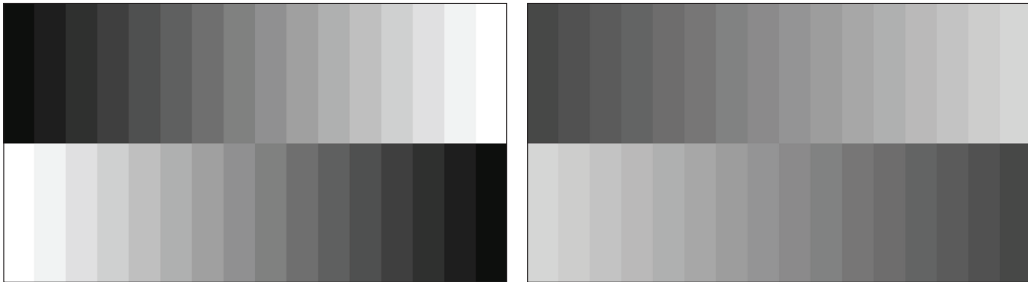
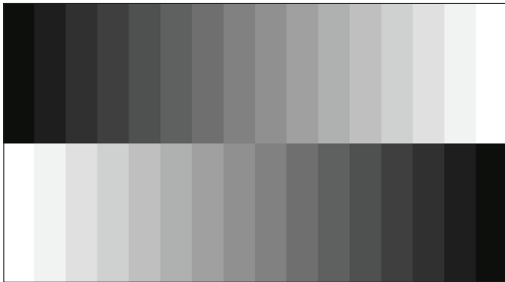
5.3 Image Setting



1. Press the  button to call out the OSD window.
2. Select **IMAGE SETTING** menu, then press the  button.
3. Press the  or  button to select an option.
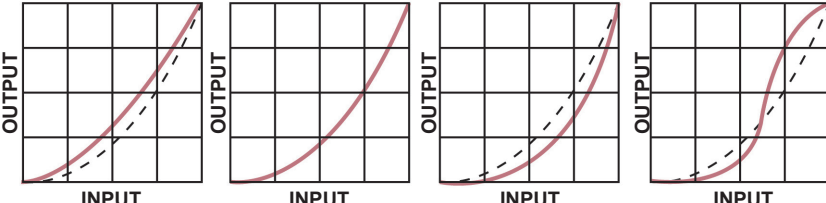
| Item | Function | Operation | Range |
|------------|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| SHARPNESS | Adjusts the clarity and focus of the screen image. | Press the  or  button to adjust the value. | 0 to 100 |
| SATURATION | Adjusts the colour saturation. | | |
| TINT | Adjusts the colour tint. | | |
| GAMMA | Adjusts the non-linear setting for picture luminance and contrast. | Press the  or  button to select the setting. | 2.0 2.2 2.4 S |
| |  | |  |

ADJUSTING THE LCD DISPLAY

| Item | Function | Operation | Range |
|-----------------|---------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|-----------------------------------|
| COLOUR RANGE | Adjusts black and white levels for video. Note: This menu option is only available if the input source is HDMI. | Press the ◀ or ▶ button to select the setting. | AUTO FULL LIMITED |
| | Signal source from PC - PC signal at a full range (Grayscale 0-255) state: | | |
| |  | | |
| | Monitor OSD colour range: Full *Please select | | Monitor OSD colour range: Limited |
| NOISE REDUCTION | Adjusts the noise reduction to help remove noise from images. This helps produce clearer and crisper images. | Press the ◀ or ▶ button to select the setting. | OFF LOW MID HIGH |
| | Signal source from Video - Video signal at a limited range (Grayscale 16~235) state: | | |
| |  | | |
| | Monitor OSD colour range: Limited *Please select | | Monitor OSD colour range: Full |
| PICTURE MODE | Selects a predefined picture mode setting. | Press the ◀ or ▶ button to select the setting. | STANDARD CCTV VIDEO |
| |  | | |

ADJUSTING THE LCD DISPLAY

| Item | Function | Operation | Range |
|--------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|----------|
| H. POSITION (Horizontal Position) | Moves the screen image to the left or right. | Press the ◀ or ▶ button to adjust the value. | 0 to 100 |
| V. POSITION (Vertical Position) | Moves the screen image up or down. | | |
| PHASE | Adjusts the phase timing to synchronise with the video signal. Note: This menu option is only available if the input source is VGA. | | |
| CLOCK | Adjusts the frequency timing to synchronise with the video signal. Note: This menu option is only available if the input source is VGA. | | |

ADJUSTING THE LCD DISPLAY

5.4 Aspect Ratio



1. Press the button to call out the OSD window.
2. Select **ASPECT RATIO** menu, then press the button.
3. Press the or button to select an option.







| Item | Function | Operation | Range |
|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|--------------------------------------------|
| ASPECT RATIO | Adjusts the aspect ratio of the screen image. | Press the or button to select the setting. | FULL REAL NATIVE ZOOM OVERSCAN |
| | <p>The aspect ratio setting can be set to:</p> <ul style="list-style-type: none"> • FULL - Enlarges the picture to fill the screen. • REAL - Displays the picture at its original size. • NATIVE - Enlarges the picture but retain its original aspect ratio. • ZOOM - Sets a custom aspect ratio by adjusting the horizontal zoom(H. ZOOM) and /or vertical zoom(V.ZOOM) according to your preference. <ol style="list-style-type: none"> 1 Select ZOOM, and press the button. 2 Press the or button to select the zoom parameter you want to adjust. 3 Press the or button to adjust the values between 0 ~ 100. • OVERSCAN - Adjusts the overscan setting to fix the cut-off screen edges. Press the or button to adjust the values between 0 ~ 100. | | |





ADJUSTING THE LCD DISPLAY

5.5 PIP Setting



1. Press the  button to call out the OSD window.
2. Select **PIP SETTING** menu, then press the  button.
3. Press the  or  button to select an option.



| Item | Function | Operation | Range |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------|
| PIP | Allows you to select the PIP setting or disable PIP. | Press the  or  button to select the value. | OFF PIP PBP |
| | PIP can be set to: <ul style="list-style-type: none"> • OFF - Disables PIP. • PIP - The sub source image is within the main source image. • PBP - The main source and sub source images are displayed side by side. | | |
| MAIN SOURCE | Allows you to select the main source signal. | Press the  or  button to select the setting. | VGA DVI HDMI |
| SUB SOURCE | Allows you to select the sub source signal. | | DISPLAYPORT COMPOSITE 1 COMPOSITE 2 S-VIDEO |

ADJUSTING THE LCD DISPLAY

Note: Any input signal may be set as the main or the sub source signal. However, some input signals are not supported to be paired together as the main and the sub source signals.


Refer to the following table for compatibility options:





| Input Source | | Main Source | | | | | | |
|--------------|-------------|-------------|-----|------|-------------|-------------|-------------|---------|
| | | VGA | DVI | HDMI | DISPLAYPORT | COMPOSITE 1 | COMPOSITE 2 | S-VIDEO |
| Sub Source | VGA | X | O | O | O | O | O | O |
| | DVI | O | X | O | O | O | O | O |
| | HDMI | O | O | X | O | O | O | O |
| | DISPLAYPORT | O | O | O | X | O | O | O |
| | COMPOSITE 1 | O | O | O | O | X | X | X |
| | COMPOSITE 2 | O | O | O | O | X | X | X |
| | S-VIDEO | O | O | O | O | X | X | X |







| Item | Function | Operation | Range |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|--------------------------|
| SUB PICTURE SIZE (Sub Picture Size) | Allows you to select the size of the sub source image. Note: This menu option is only available if the PIP setting is to PIP . | Press the ◀ or ▶ button to select the setting. | 1 2 3 |
| | The size of the sub source image can be set to: <ul style="list-style-type: none"> • 1 - Small image size. • 2 - Medium image size. • 3 - Large image size. | | |
| SUB PIC. POS. (Sub Picture Position) | Allows you to select the position of the sub source image. Note: This menu option is only available if the PIP setting is to PIP | Press the ◀ or ▶ button to select the setting. | L+U R+U L+D R+D |
| | The position of the sub source image can be set to: <ul style="list-style-type: none"> • L+U - Sets the image on the upper left corner of the screen. • R+U - Sets the image on the upper right corner of the screen. • L+D - Sets the image on the lower left corner of the screen. • R+D - Sets the image on the lower right corner of the screen. | | |
| SWAP | Swaps the main source and sub source signals. | Press the ▶ button to execute the function. | - |

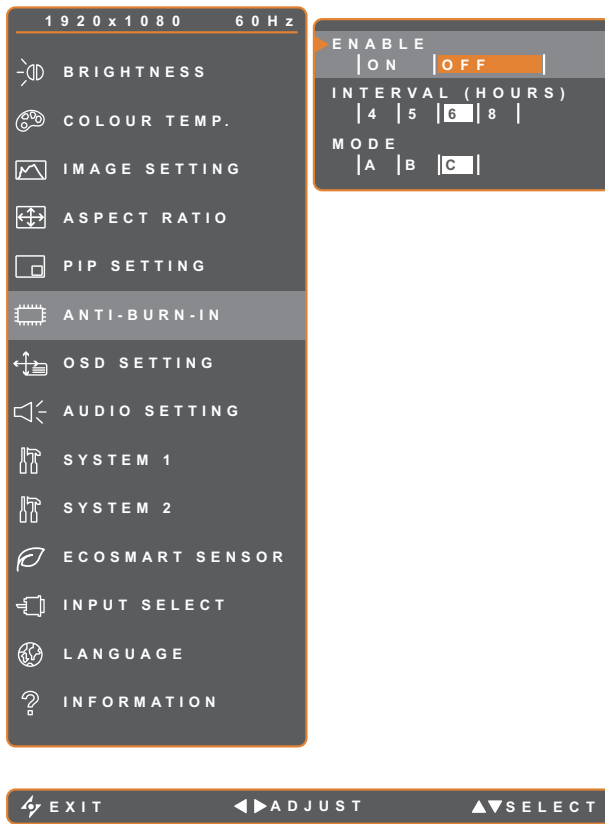ADJUSTING THE LCD DISPLAY

5.6 Anti-Burn-in







1. Press the  button to call out the OSD window.
2. Select **ANTI-BURN-IN** menu, then press the  button.
3. Press the  or  button to select an option.

| Item | Function | Operation | Range |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|
| ENABLE | Enables or disables Anti-Burn-In function. | Press the  or  button to select the setting. | ON OFF |
| INTERVAL (HOURS) | Sets the interval time (hour) between activating the Anti-Burn-In function. | Press the  or  button to adjust the value. | 4 5 6 8 |
| MODE | Selects the Anti-Burn-In mode. | Press the  or  button to select the setting. | A B C |
| | Anti-Burn-In mode can be set to: <ul style="list-style-type: none"> • A - Executes fast. • B - Slower but more precise than mode A. • C - Slowest but the most precise anti-burn-in mode. | | |

ADJUSTING THE LCD DISPLAY

5.7 OSD Setting




1. Press the  button to call out the OSD window.
2. Select **OSD SETTING** menu, then press the  button.
3. Press the  or  button to select an option.







| Item | Function | Operation | Range |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------|----------|
| TRANSPARENCY | Adjusts the transparency level of the OSD screen. | Press the ◀ or ▶ button to adjust the value. | 0 to 100 |
| OSD H. POSITION (Horizontal Position) | Moves the OSD window to the left or right of the screen. | | |
| OSD V. POSITION (Vertical Position) | Moves the OSD window up or down the screen. | | |
| OSD TIMER | Sets the length of time (in seconds) the OSD screen is displayed. When the time elapses, the OSD screen is automatically inactivated. | | |

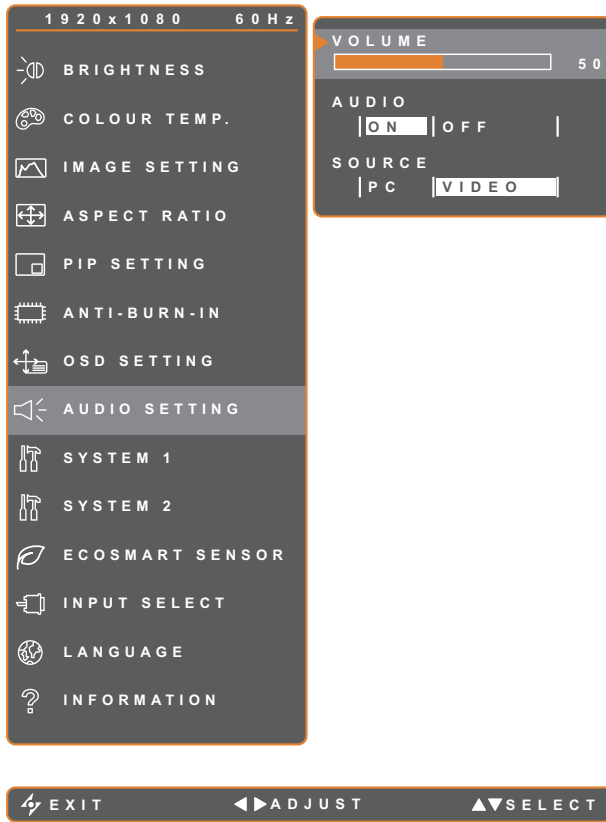ADJUSTING THE LCD DISPLAY

5.8 Audio Setting








1. Press the  button to call out the OSD window.
2. Select **AUDIO SETTING** menu, then press the  button.
3. Press the  or  button to select an option.

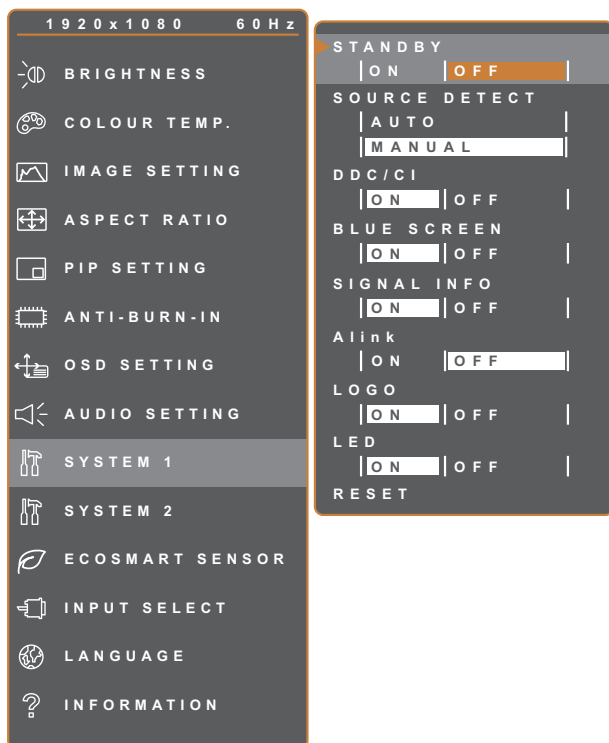

| Item | Function | Operation | Range |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|-------------|
| VOLUME | Adjusts the volume level of the built-in speaker. | Press the ◀ or ▶ button to adjust the value. | 0 to 100 |
| AUDIO | Turns the audio ON or OFF. | Press the ◀ or ▶ button to select the setting. | ON OFF |
| SOURCE | Selects the audio source for the PC or Video input signal. Note: This menu option is only available if the input source is HDMI or DisplayPort. | | PC VIDEO |

ADJUSTING THE LCD DISPLAY

5.9 System 1



1. Press the  button to call out the OSD window.
2. Select **SYSTEM 1** menu, then press the  button.
3. Press the  or  button to select an option.

| Item | Function | Operation | Range |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| STANDBY | <p>Enables or disables Standby mode. When the LCD display turns into Standby mode, the screen turns black and the LED indicator lights amber.</p> <p>Note: The amount of time for the display to enter Standby varies depending on the Source Detect setting. If the Source Detect is set to Auto, the display checks all input source signals before entering Standby mode if no signal is detected; this takes up more time. If the Source Detect is set to Manual, the display enters Standby mode right away.</p> | Press the  or  button to select the setting. | ON OFF |
| SOURCE DETECT | Sets the display to automatically or manually detect the input source signal. | | AUTO MANUAL |





ADJUSTING THE LCD DISPLAY



| Item | Function | Operation | Range |
|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|-----------|
| DDC/CI | Activates the DDC/CI protocol to allow users to configure the monitor by a software using two wires on the VGA, HDMI, DisplayPort, or DVI cables. | | |
| BLUE SCREEN | Enables or disables the blue screen feature. If the setting is set to ON , it displays a blue screen when no signal is available. | | |
| SIGNAL INFO | Enables or disables the signal information to be displayed on the screen. | | |
| Alink | Enables or disables HDMI Consumer Electronics Control control. If the setting is set to On , you can control the connected HDMI-CEC compatible device on the same power on or power off status. Note: This menu option is only available if the input source is HDMI. | Press the ◀ or ▶ button to select the setting. | ON OFF |
| LOGO | Enables or disables the logo feature. If the setting is set to ON , the AG Neovo logo is briefly displayed after the display is powered on. | | |
| LED | Sets the display LED indicator on or off. | | |
| RESET | Use to reset all to default settings, except Language, and the input source. | Press the ▶ button to execute the function. | - |

ADJUSTING THE LCD DISPLAY

5.10 System 2



1. Press the  button to call out the OSD window.
2. Select **SYSTEM 2** menu, then press the  button.
3. Press the  or  button to select an option.

| Item | Function | Operation | Range |
|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| SUPER RESOLUTION | Upscales images at a higher and more detailed resolution for better clearness. | Press the  or  button to select the setting. | OFF LOW MID HIGH |
| OVERDRIVE | Enhances the display response time. | | |
| DCR (Dynamic Contrast Ratio) | Activates DCR. This feature provides automatic adjustment of picture brightness and contrast at high speed and dynamic contrast range, such as when watching movies. DCR is suitable for indoor viewing. Note: When the DCR function is activated, the BACKLIGHT and ECOSMART SENSOR function will be disabled. | | |
| NIGHT MODE | Enables or disables the night mode feature. When you are using the display in a dark room, set the setting to ON . This allows user to manually adjust backlight to lower than normal level for better viewing experience in the dark environment. Note: When the NIGHT MODE is activated, the DCR and ECOSMART SENSOR functions will be disabled. | | |


ADJUSTING THE LCD DISPLAY


| Item | Function | Operation | Range |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|-------|
| MONITOR ID | Sets the ID number for controlling the display via the RS232 connection. Each display must have a unique ID number when multiple sets of this display are connected. | Press the ◀ or ▶ button to set the ID. | 1~255 |

5.11 EcoSmart Sensor

With the built-in EcoSmart sensor, users can enable the Eco Smart feature to automatically adjust the LCD screen brightness according to the ambient light. This feature comforts the eyes and helps optimise energy efficiency.

Note: Please make sure the EcoSmart sensor is not covered when enabling this function.

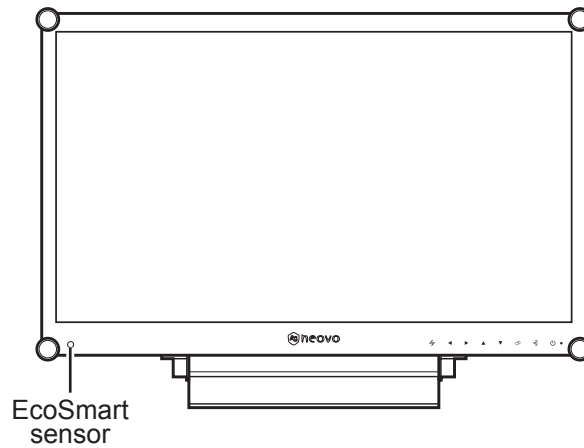

1. Press the  button to call out the OSD window.
2. Select **ECOSMART SENSOR** menu, then press the ▶ button.
3. Press the ▲ or ▼ button to select an option.








ADJUSTING THE LCD DISPLAY

| Item | Function | Operation | Value |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|--------------|
| ENABLE | Enables or disables the Eco Smart feature. | Press the ◀ or ▶ button to select the setting. | ON OFF |
| MODE | Sets the auto brightness mode. | Press the ◀ or ▶ button to select the setting. | AUTO USER |
| | The mode can be set to: <ul style="list-style-type: none"> • AUTO - This mode is the default mode. The LCD brightness automatically adjusts to the ambient brightness. • USER - Allows you to manually adjust the LCD brightness. | | |
| LEVEL | Allows you to set the level of LCD brightness. Note: This menu option is only available if the MODE setting is to USER . | Press the ◀ or ▶ button to adjust the value. | 0 to 100 |

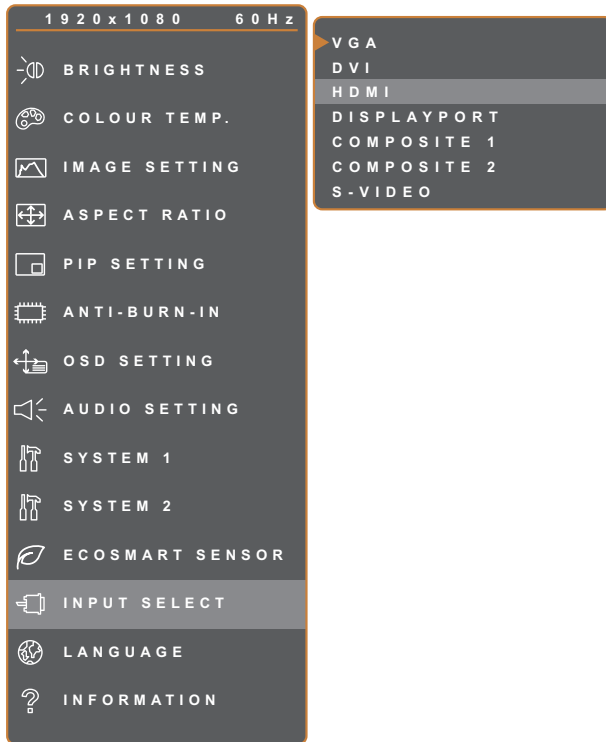
ADJUSTING THE LCD DISPLAY

5.12 Input Select








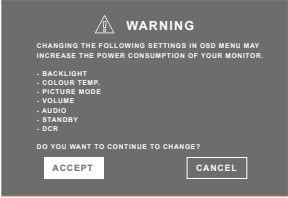
1. Press the  button to call out the OSD window.
2. Select **INPUT SELECT** menu, then press the  button.
3. Press the  or  button to select an option.



| Item | Function | Operation | Value |
|-------------|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|-------|
| VGA | Sets VGA as the input source signal. | Press the  button to switch to the selected input source. | - |
| DVI | Sets DVI as the input source signal. | | |
| HDMI | Sets HDMI as the input source signal. | | |
| DISPLAYPORT | Sets DisplayPort as the input source signal. | | |
| COMPOSITE 1 | Sets COMPOSITE 1 as the input source signal. | | |
| COMPOSITE 2 | Sets COMPOSITE 2 as the input source signal. | | |
| S-VIDEO | Sets S-VIDEO as the input source signal. | | |

CHAPTER 6: APPENDIX

6.1 Warning Messages

| Warning Messages | Cause | Solution |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | The resolution or the refresh rate of the graphics card of the computer is set too high. | <ul style="list-style-type: none"> Change the resolution or the refresh rate of the graphics card. |
|  | The LCD display cannot detect the input source signal. | <ul style="list-style-type: none"> Check if the input source is turned ON. Check if the signal cable is properly connected. Check if any pin inside the cable connector is twisted or broken. |
|  | The OSD has been locked by the user. | <ul style="list-style-type: none"> Unlock the OSD. Refer to page 26. |
|  | The Anti-Burn-In function has been enabled by the user. | <ul style="list-style-type: none"> Disable the Anti-Burn-In function. Refer to page 41. |
|  | The Anti-Burn-In function has been disabled by the user. | <ul style="list-style-type: none"> Enable the Anti-Burn-In function. Refer to page 41. |
|  | This warning message box will only show when the menu feature setting is changed for the first time. | <ul style="list-style-type: none"> Press the Enter button to continue the setting changes, or press the CANCEL button to disable the setting changes. Note: The operation may vary from different product models. |

APPENDIX

6.2 Supported Resolutions


| PC Mode | Resolution | | Refresh Rate |
|--------------|------------|----------|--------------|
| | Horizontal | Vertical | |
| IBM VGA | 720 | 400 | 70 |
| IBM VGA | 640 | 480 | 60 |
| Apple Mac II | 640 | 480 | 67 |
| VESA | 640 | 480 | 72 |
| VESA | 640 | 480 | 75 |
| VESA | 800 | 600 | 56 |
| VESA | 800 | 600 | 60 |
| VESA | 800 | 600 | 72 |
| VESA | 800 | 600 | 75 |
| Apple Mac II | 832 | 624 | 75 |
| VESA | 1024 | 768 | 60 |
| VESA | 1024 | 768 | 70 |
| VESA | 1024 | 768 | 75 |
| VESA | 1280 | 1024 | 60 |
| VESA | 1280 | 1024 | 75 |
| Apple Mac II | 1152 | 870 | 75 |
| VESA | 1152 | 864 | 75 |
| VESA | 1280 | 800 | 60 |
| VESA | 1280 | 800 | 75 |
| VESA | 1280 | 960 | 60 |
| VESA | 1440 | 900 | 60 |
| VESA | 1680 | 1050 | 60 |
| VESA | 1920 | 1080 | 60 |

| Video Mode | Resolution | | Refresh Rate |
|------------|------------|----------|--------------|
| | Horizontal | Vertical | |
| EDTV | 720 | 480 | 60i |
| EDTV | 720 | 480 | 60 |
| EDTV | 720 | 576 | 50i |
| EDTV | 720 | 576 | 50 |
| HDTV | 1280 | 720 | 50 |
| EDTV | 1280 | 720 | 60 |
| HDTV | 1920 | 1080 | 50i |
| HDTV | 1920 | 1080 | 50 |
| HDTV | 1920 | 1080 | 60i |

APPENDIX

| Video Mode | Resolution | | Refresh Rate |
|------------|------------|----------|--------------|
| | Horizontal | Vertical | |
| HDTV | 1920 | 1080 | 60 |
| HDTV | 1920 | 1080 | 24 |
| HDTV | 1920 | 1080 | 25 |
| HDTV | 1920 | 1080 | 30 |

6.3 Troubleshooting

| Problem | Possible Cause and Solution |
|----------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>No picture.</p> <ul style="list-style-type: none"> • LED indicator is OFF. | <ul style="list-style-type: none"> • Check if the LCD display is turned ON. • Check if the power cord is properly connected to the LCD display. • Check if the power cord is plugged into the power outlet. |
| <ul style="list-style-type: none"> • LED indicator is AMBER. | <ul style="list-style-type: none"> • Check if the computer is turned ON. • Check if the computer is in standby mode, move the mouse or press any key to wake up the computer. |
| Image position is incorrect. | <ul style="list-style-type: none"> • Adjust the H. POSITION and V. POSITION values. See IMAGE SETTING on page 35. |
| The displayed texts are blurry. | <ul style="list-style-type: none"> • For VGA input, press the  button on the keypad to auto-adjust the display. • Adjust the IMAGE SETTING (see page 35). |
| The OSD menu can't be called out. | <ul style="list-style-type: none"> • The OSD is locked. To unlock the OSD, see page 26. |
| Red, blue, green, white dots appear on screen. | <ul style="list-style-type: none"> • There are millions of micro transistors inside the LCD display. It is normal for a few transistors to be damaged and to produce spots. This is acceptable and is not considered a failure. |
| No audio output. | <ul style="list-style-type: none"> • Check if the volume is set to 0 (see page 22 or 43). • Check if the AUDIO SETTING > AUDIO setting is set to OFF (see page 43). • For VGA or DVI input, check the audio setting of the computer. • For HDMI or DisplayPort input, select the correct audio input source (see page 43). |
| PIP mode does not work. | <ul style="list-style-type: none"> • The main and sub input source signals are not compatible to be displayed together in PIP mode. Check the PIP Compatibility Table for details (see page 40). |

APPENDIX


| Problem | Possible Cause and Solution |
|---------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cannot adjust the backlight setting. | <ul style="list-style-type: none"> The Eco Smart feature is enabled. Set the ECOSMART SENSOR > ENABLE setting to OFF to disable the Eco Smart feature (see page 47). |
| The displayed picture looks distorted. | <ul style="list-style-type: none"> Adjust the aspect ratio (see page 38). |
| Dew formed on or inside the LCD display. | <ul style="list-style-type: none"> This normally happens when the LCD display is moved a cold room to a hot room temperature. Do not turn ON the LCD display, wait for the dew condensation to disappear. |
| Mist formed inside the glass surface. | <ul style="list-style-type: none"> This happens due to humid weather conditions. This is a normal occurrence. The mist will disappear after a few days or as soon as the weather stabilizes. |
| Faint shadows from a static image appear on the screen. | <ul style="list-style-type: none"> Turn off the LCD display for extended periods of time. Use a screen saver or a black and white image and run it for extended periods of time. |

APPENDIX

6.4 Transporting the LCD Display

To transport the LCD display for repair or shipment, place the display in its original packaging carton.

- 1 Place the two foam cushions on each side of the LCD display for protection.**
- 2 Place the LCD display down in the box.**
- 3 Place the accessories box on the designated area (if necessary).**
- 4 Close and tape the box.**

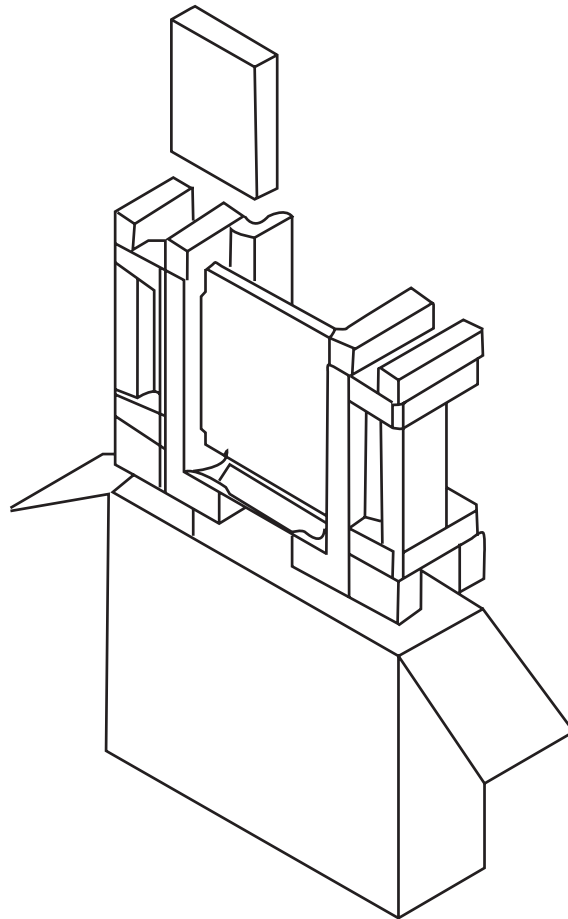

CHAPTER 7: SPECIFICATIONS

7.1 Display Specifications

| RX-2202 | | |
|-------------------------------|--------------------------|--------------------------------------------------|
| Panel | Panel Type | LED-Backlit TFT LCD (IPS Technology) |
| | Panel Size | 21.5" |
| | Max. Resolution | FHD 1920 x 1080 |
| | Pixel Pitch | 0.248 mm |
| | Brightness | 250 cd/m ² |
| | Contrast Ratio | 20,000,000:1 (DCR) |
| | Viewing Angle (H/V) | 178°/178° |
| | Display Colour | 16.7M |
| | Response Time | 5 ms |
| | Surface Treatment | Anti-Glare Treatment (Haze 25%), 3H Hard Coating |
| Frequency (H/V) | H Freq. | 24 kHz-83 kHz |
| | V Freq. | 50 Hz-75 Hz |
| Input | DisplayPort | x 1 |
| | HDMI | 1.4 x 1 |
| | DVI | 24-Pin DVI-D x 1 |
| | VGA | 15-Pin D-Sub x 1 |
| | Composite (CVBS) | BNC x 2 |
| | S-Video | 4-Pin mini DIN x 1 |
| Output | Composite (CVBS) | BNC x 2 |
| External Control | RS232 In | 2.5 mm Phone Jack |
| Other Connectivity | USB | 2.0 x1 (Service Port) |
| Audio | Audio In | Stereo Audio Jack (3.5 mm) |
| | | Stereo Audio Jack (RCA) |
| | Audio Out | Stereo Audio Jack (RCA) |
| | Internal Speakers | 2W x 2 |
| Power | Power Supply | External |
| | Power Requirements | DC 12V, 2.1A |
| | On Mode | 16W (On) |
| | Standby Mode | < 0.5 W |
| | Off Mode | < 0.3 W |
| Glass | Thickness | 3.0 mm (0.12") |
| | Reflection Rate | < 1% |
| | Transmission Rate | > 97% |
| | MOHS Hardness | 6 |
| | Pencil Hardness | 9H |
| | IK Rating | IK07 |
| Operating Conditions | Temperature | 0°C-40°C (32°F-104°F) |
| | Humidity | 10%-90% (non-condensing) |
| Transport/ Storage Conditions | Temperature | -20°C-60°C (-4°F-140°F) |
| | Humidity | 5%-95% (non-condensing) |
| Mounting | VESA FPMPI | Yes (100 x 100 mm & 75 x 75 mm) |
| Stand | Tilt | 0° to 17° |
| Security | Kensington Security Slot | Yes |
| Dimensions | w/o Base (W x H x D) | 513.2 x 324.3 x 56.2 mm (20.2" x 12.8" x 2.2") |
| | w/Base (W x H x D) | 513.2 x 368.5 x 155.0 mm (20.2" x 14.5" x 6.1") |
| | Packaging (W x H x D) | 614.0 x 477.0 x 204.0 mm (24.2" x 18.8" x 8.0") |
| Weight | w/o Base | 6.4 kg (14.1 lb) |
| | w/Base | 6.9 kg (15.2 lb) |
| | Packaging | 9.0 kg (19.8 lb) |


Note:

- ◆ All specifications are subject to change without prior notice.

SPECIFICATIONS

7.2 Display Dimensions

7.2.1 RX-2202 Dimensions

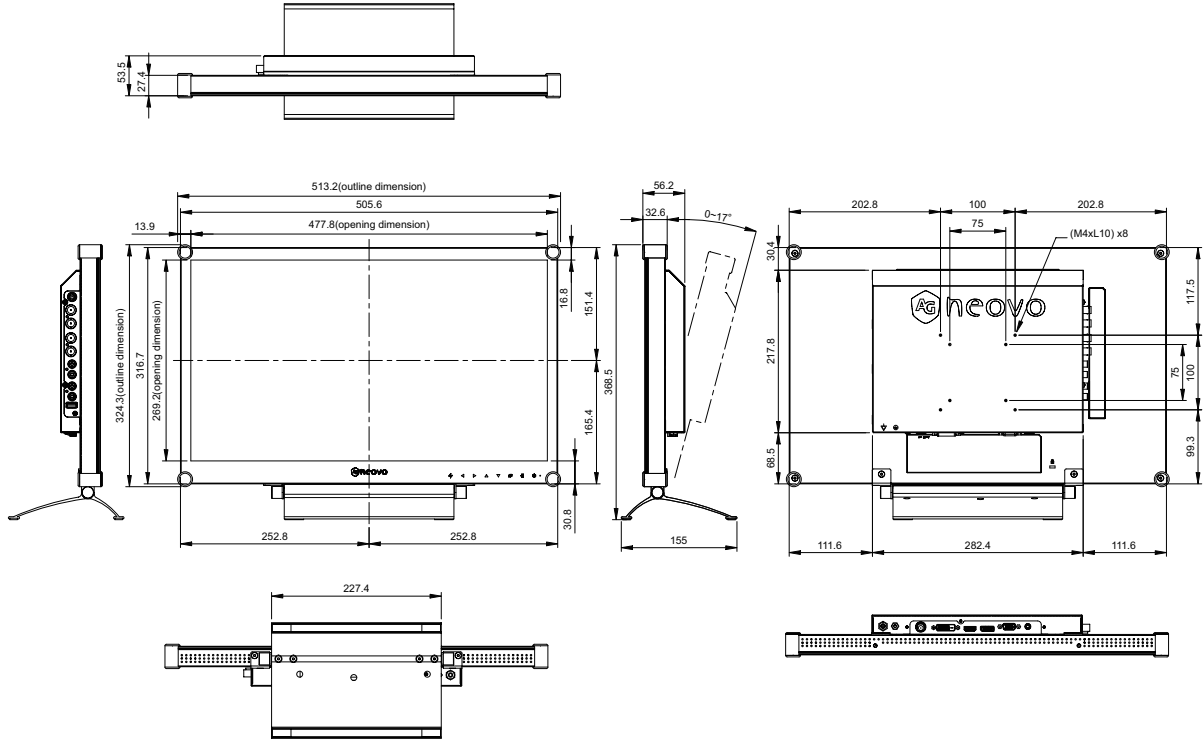

AG Neovo

Company Address: 5F-1, No. 3-1, Park Street, Nangang District, Taipei, 11503, Taiwan.

Copyright © 2025 AG Neovo. All rights reserved.

RX-2202 Eprel registration number: 1908027

RX2220_UM_V010